


A4 FEM1.001

**H** = Height under hook  
Altezza sotto gancio  
Hauteur sous crochet  
Altura bajo el gancho  
Высота под крюком

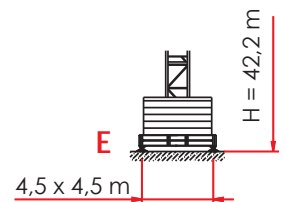

## LOAD DIAGRAMS 8.0 T

DIAGRAMMA DI PORTATA / DIAGRAMME DE CHARGE UTILE / CURVAS DE CARGA /  
 ДИАГРАММА ГРУЗОПОДЪЕМНОСТИ

JIB	8.000 Kg								
	19.0	25.0	31.0	36.5	42.5	48.0	50.0	54.0	60.0
1,6 ▶	19.0	22.9	22.9	21.8	20.4	19.3	18.8	17.5	16.2
14	8000	8000	8000	8000	8000	8000	8000	8000	8000
16	8000	8000	8000	8000	8000	8000	8000	8000	8000
19	<b>8000</b>	8000	8000	8000	8000	8000	7894	7281	6717
21		8000	8000	8000	7742	7276	7066	6515	6006
22		8000	8000	7902	7355	6911	6711	6186	5701
23		7955	7945	7526	7003	6579	6388	5887	5424
24		7593	7582	7181	6681	6276	6093	5613	5171
25		<b>7260</b>	7250	6866	6386	5998	5823	5363	4939
26			6944	6575	6115	5742	5574	5132	4725
27			6662	6307	5864	5506	5344	4919	4527
28			6400	6059	5632	5287	5131	4722	4345
29			6157	5828	5417	5083	4933	4539	4175
30			5931	5613	5216	4894	4749	4368	4017
31			<b>5720</b>	5412	5028	4717	4577	4209	3869
32				5224	4853	4552	4416	4060	3731
33				5048	4688	4397	4265	3920	3601
34				4883	4534	4251	4123	3788	3479
35				4727	4388	4114	3990	3665	3365
36				4580	4251	3984	3864	3548	3257
36.5				<b>4510</b>	4185	3922	3804	3492	3205
37					4122	3862	3745	3438	3155
38					3999	3746	3633	3334	3058
39					3883	3637	3526	3235	2967
40					3772	3533	3425	3141	2880
41					3668	3434	3329	3052	2797
42					3568	3340	3237	2968	2719
42.5					<b>3520</b>	3295	3193	2927	2681
43						3251	3150	2887	2644
44						3165	3067	2810	2573
45						3084	2988	2737	2505
46						3006	2912	2666	2440
47						2931	2840	2599	2377
48						<b>2860</b>	2770	2535	2318
49							2704	2473	2261
50							<b>2640</b>	2414	2206
51								2357	2153
52								2303	2103
54								<b>2200</b>	2007
56									1919
60									<b>1760</b>



+ 80 Kg


**ULTRALIFT** \_ALL INTERMEDIATE LOADS ARE DECREASED OF 10% IF THE CRANE IS NOT EQUIPPED WITH ULTRALIFT CONTROL / SENZA IL SISTEMA ULTRALIFT TUTTE LE PORTATE INTERMEDIE DIMINUISCONO IL CARICO DEL 10% / LES CHARGES INTERMEDIARES SONT DIMINUEES DE 10% SI LA GRUE N'EST PAS EQUIPE D'UN CONTROLE ULTRALIFT / SIN EL SISTEMA ULTRALIFT LOS MISAURA INTERMEDIOS DISMINUIR EL CARICO DEL 10% / БЕЗ ULTRALIFT ПРОМЕЖУТОЧНОЙ УМЕНЬШАЕТСЯ НА 10% НАГРУЗКИ.

## TOWER CONFIGURATION - REACTIONS

CONFIGURAZIONE TORRE - REAZIONI / CONFIGURATION TOUR - RÉACTIONS / TORRE DE CONFIGURACIÓN - REACCIONES / КОНФИГУРАЦИЯ БАШНИ - РЕАКЦИИ


### ▣ 1,5 m L = 4,5 m - A

	H (m)	Z (t)	F1 (kN)
7	-	-	-
6	-	-	-
5	5,9 m	42,8	91,8
4	5,9 m	36,9	81,6
3	5,9 m	31,0	61,2
2	5,9 m	25,1	61,2
+1	5,9 m	19,2	

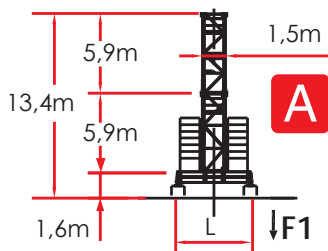


### ▣ 1,5 m L = 4,5 m - B

	H (m)	Z (t)	F1 (kN)
7	-	-	-
6	-	-	-
5	5,9 m	42,5	91,8
4	5,9 m	36,6	81,6
3	5,9 m	30,7	61,2
2	5,9 m	24,8	61,2
+1	5,9 m	18,9	

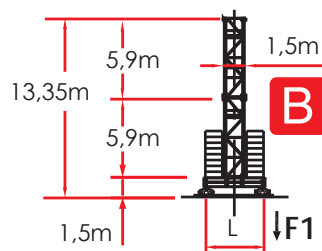

### ▣ 1,5 m L = 4,5 m - E

	H (m)	Z (t)	F1 (kN)
7	-	-	-
6	-	-	-
5	5,9 m	42,2	91,8
4	5,9 m	36,3	81,6
3	5,9 m	30,4	61,2
2	5,9 m	24,5	61,2
+1	5,9 m	18,6	

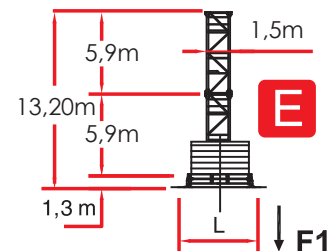

### ▣ 1,5 m - D

	H (m)	F2 (kN)	F3 (kN)
7	-	-	-
6	-	-	-
5	5,9 m	41,4	1200
4	5,9 m	35,5	1108
3	5,9 m	29,6	1005
2	5,9 m	23,7	920
+1	5,9 m	17,8	851



Comply with the specified ballast / Attenersi alla zavorra indicata / S'en tenir au lest indiqué / respetar el peso de lastre indicado / Соблюдать указанный балласт

